


注: 1. 变形缝W 高度按工程设计。  
2. 伸缩量系指变形缝装置拉伸与压缩时的变形量。

③ DGA 型	
W	75 100 125 150 200 250 300 350 400 450 500
ES	175 200 225 250 300 375 450 525 600 675 750
伸	37 50 62 75 100 125 150 175 200 225 250
缩	


材料	规格	绘图	审核	校核
Material				
Thickness				
Colour				
Height				
Use length				

Meishuo Building Materials Co., Ltd  
楼地面变形缝 (金属盖板型) (二) 图集 05JT06  
页码 9

1. Clean the garbage and check if the gap is equally wide and straight.

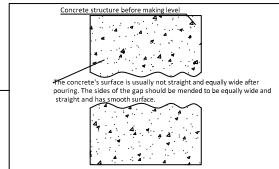


Make Level(horizontal section)

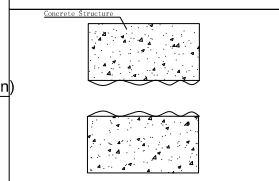


2. Make levelCut to make sure the gap straight and the aluminum frame install straight(horizontal section)


Make Level(horizontal section)

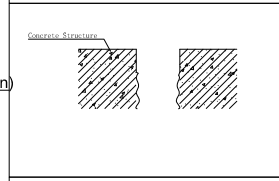

3. Make Decroitive Level

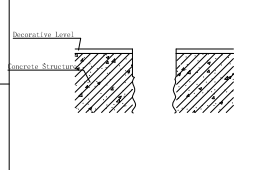

4. Install Fire Barrier

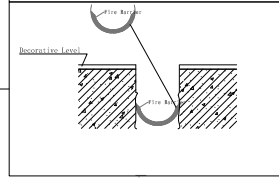


注: 1. 变形缝W 高度按工程设计。  
2. 伸缩量系指变形缝装置拉伸与压缩时的变形量。

③ DGA 型	
W	75 100 125 150 200 250 300 350 400 450 500
ES	175 200 225 250 300 375 450 525 600 675 750
伸	37 50 62 75 100 125 150 175 200 225 250
缩	


材料	规格	绘图	审核	校核
Material				
Thickness				
Colour				
Height				
Use length				

Meishuo Building Materials Co., Ltd  
楼地面变形缝 (金属盖板型) (二) 图集 05JT06  
页码 9


5. Install Water Barrier

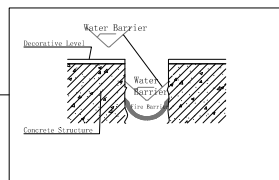

6. Fix the aluminum frame to make sure the surface and the decorative are on the same level

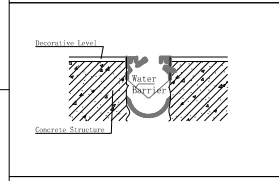

7. Connect the centering bar and the plate, turn the screw for 2-3 circles and put on the frame.

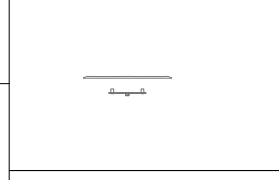

8. Control the screw, move the centering bar to the hold and tightening the screw. Installation finished.

